

Description	Group-Page	Description	Group-Page	Description	Group-Page
BODY DIAGNOSITCS					
A/C COMPRESSOR CLUTCH CIRCUIT	.24-43	FUEL LEVEL SENSOR CIRCUIT	.8J-7	RIGHT FRONT TIRE PRESSURE SENSOR/TRANSMITTER SIGNAL JAMMED	.22-15
A/C PRESSURE SENSOR CIRCUIT	.24-28	HAZARD SWITCH CIRCUIT	.8L-118	RIGHT FRONT TIRE PRESSURE SENSOR/TRANSMITTER	.22-28
AIRBAG VERIFICATION TEST	.80-67	INVALID TRANSMITTER	.8Q-36	RIGHT HEATER CORE TEMPERATURE SENSOR CIRCUIT	.24-13
AIRBAG WARNING INDICATOR CIRCUIT	.80-46	LAMP OUTAGE INDICATOR CIRCUIT	.8J-5	RIGHT REAR TIRE PRESSURE SENSOR/TRANSMITTER SIGNAL JAMMED	.22-17
AMBIENT TEMPERATURE SENSOR CIRCUIT	.24-3	LEFT COOLANT CIRCULATION VALVE CIRCUIT	.24-37	RIGHT REAR TIRE PRESSURE SENSOR/TRANSMITTER	.22-30
AMBIENT TEMPERATURE SENSOR CIRCUIT	.8J-9	LEFT FRONT TIRE PRESSURE SENSOR/TRANSMITTER SIGNAL JAMMED	.22-11	RIGHT SIDE AIRBAG SQUIB CIRCUIT	.80-35
ANTI-THEFT TOW SENSOR SIGNAL CIRCUIT	.8Q-22	LEFT FRONT TIRE PRESSURE SENSOR/TRANSMITTER	.22-24	RIGHT SIDE IMPACT SENSOR SIGNAL CIRCUIT	.80-63
BODY CONTROL MODULE INTERNAL FAILURE	.23-2	LEFT HEATER CORE TEMPERATURE SENSOR CIRCUIT	.24-8	SENTRY KEY ANTENNA CIRCUIT	.8Q-38
BODY CONTROL MODULE INTERNAL FAILURE	.8N-11	LEFT REAR TIRE PRESSURE SENSOR/TRANSMITTER SIGNAL JAMMED	.22-13	SENTRY KEY REMOTE ENTRY MODULE INTERNAL FAILURE	.8Q-34
BODY VERIFICATION TEST	.24-53	LEFT REAR TIRE PRESSURE SENSOR/TRANSMITTER	.22-26	SENTRY KEY VERIFICATION TEST	.8Q-43
BODY VERIFICATION TEST	.8A-16	LEFT SIDE AIRBAG SQUIB CIRCUIT	.80-29	SIGNAL JAMMED	.22-9
BODY VERIFICATION TEST	.8E-44	LEFT SIDE IMPACT SENSOR SIGNAL CIRCUIT	.80-59	SIREN SIGNAL OUTPUT CIRCUIT	.8Q-27
BODY VERIFICATION TEST	.8G-20	NO CAN COMMUNICATIONS WITH CAB	.8J-24	SPOILER LIMIT SWITCH SIGNAL (DOWN) CIRCUIT	.23-10
BODY VERIFICATION TEST	.8G-34	NO CAN COMMUNICATIONS WITH PCM	.8J-18	SPOILER LIMIT SWITCH SIGNAL (UP) CIRCUIT	.23-7
BODY VERIFICATION TEST	.8G-8	NO CAN COMMUNICATIONS WITH PCM	.8Q-25	TIRE PRESSURE MONITOR MODULE FAILURE	.22-4
BODY VERIFICATION TEST	.8H-7	NO CAN COMMUNICATIONS WITH TCM	.8J-30	TIRE PRESSURE SENSOR/TRANSMITTER LOW BATTERY	.22-32
BODY VERIFICATION TEST	.8J-52	NO COMMUNICATION FROM INSTRUMENT CLUSTER	.24-49	TIRE PRESSURE SENSOR/TRANSMITTER SIGNAL JAMMED	.22-6
BODY VERIFICATION TEST	.8L-133	NO COMMUNICATION FROM INSTRUMENT CLUSTER	.8J-14	TIRE PRESSURE SENSOR/TRANSMITTER	.22-19
BODY VERIFICATION TEST	.8L-77	NO COMMUNICATION TO INSTRUMENT CLUSTER	.24-51	TIRE PRESSURE VERIFICATION TEST	.22-35
BODY VERIFICATION TEST	.8N-119	NO COMMUNICATION TO INSTRUMENT CLUSTER	.8J-16	TRANSMITTER FAILURE	.22-22
BODY VERIFICATION TEST	.8N-28	NO COMMUNICATION WITH BCM AND CENTRAL LOCKING PUMP/SECURITY SYSTEM MODULE	.8Q-8	VOLTAGE SUPPLY CIRCUIT OPEN	.8R-2
BODY VERIFICATION TEST	.8N-62	NO COMMUNICATION WITH BODY CONTROL MODULE AND CENTRAL LOCKING PUMP/SECURITY SYSTEM MODULE	.8N-20	VTSS VERIFICATION TEST	.8Q-33
BODY VERIFICATION TEST	.8N-93	NO TIRES TRAINED	.22-2	*ALARM TRIPS ON ITS OWN	.8Q-32
CAN B BUS (+) CIRCUIT FAILURE	.8Q-13	ORC INTERNAL FAILURE	.80-2	*ASH RECEIVER LAMP INOPERATIVE	.8L-130
CAN B BUS (-) CIRCUIT FAILURE	.8Q-10	ORC SYSTEM UNDERVOLTAGE	.80-43	*AUTOMATIC DAY/NIGHT MIRROR INOPERATIVE	.8N-59
CAN BUS COMMUNICATION GENERAL MALFUNCTION	.8J-36	PASSENGER AIRBAG ON/OFF SWITCH SIGNAL CIRCUIT	.80-49	*BATTERY VOLTAGE INDICATOR INOPERATIVE	.8J-46
CENTRAL LOCKING PUMP/SECURITY SYSTEM MODULE INTERNAL FAILURE	.8N-26	PASSENGER AIRBAG SQUIB CIRCUIT	.80-23	*BOTH HEATED SEATS INOPERATIVE	.8G-32
CENTRAL LOCKING PUMP/SECURITY SYSTEM MODULE INTERNAL FAILURE	.8Q-30	PASSENGER DOOR/LIFTGATE LOCK ACTUATOR SLOW RESPONSE	.8N-8	*BOTH POWER MIRRORS INOPERATIVE	.8N-57
CENTRAL LOCKING PUMP/SECURITY SYSTEM MODULE SYSTEM OVERVOLTAGE	.8Q-5	PASSENGER SEAT BELT TENSIONER CIRCUIT	.80-56	*BOTH POWER SEATS INOPERATIVE	.8N-78
CENTRAL LOCKING PUMP/SECURITY SYSTEM MODULE SYSTEM UNDERVOLTAGE	.8Q-2	PASSENGER SEAT BELT TENSIONER SQUIB CIRCUIT	.80-17	*BOTH POWER WINDOWS INOPERATIVE	.8N-116
CLP/SSM SYSTEM OVERVOLTAGE	.8N-17	PROGRAMMING DOES NOT CORRESPOND TO THE VEHICLE EQUIPMENT	.80-41	*BRAKE WARNING INDICATOR INOPERATIVE	.8J-44
CLP/SSM SYSTEM UNDERVOLTAGE	.8N-14	REAR DEFOGGER SWITCH SENSE CIRCUIT	.8G-2	*CARGO LAMP INOPERATIVE	.8L-124
COOLANT LEVEL SENSOR/WASHER FLUID LEVEL SWITCH CIRCUIT	.8J-2	REAR SPOILER DRIVER (DOWN) CIRCUIT	.23-16	*CENTER HIGH MOUNTED STOP LAMP INOPERATIVE	.8L-68
DOME LAMP CIRCUIT	.8L-121	REAR SPOILER DRIVER (UP) CIRCUIT	.23-13	*DRB III® DOES NOT POWER UP	.8E-2
DOOR LOCK SWITCH SENSE CIRCUIT	.8Q-16	REAR SPOILER LIMIT SWITCH FAILURE	.23-19	*DRIVER POWER SEAT FRONT RISER MOTOR INOPERATIVE	.8N-85
DOOR LOCK/DOOR UNLOCK SWITCH SENSE CIRCUIT	.8N-22	REAR SPOILER MOTOR FAILURE	.23-23	*DRIVER POWER SEAT HORIZONTAL MOTOR INOPERATIVE	.8N-83
DOOR UNLOCK SWITCH SENSE CIRCUIT	.8Q-19	REAR SPOILER SWITCH SENSE CIRCUIT	.23-4	*DRIVER POWER SEAT INOPERATIVE	.8N-74
DRIVER AIRBAG SQUIB CIRCUIT	.80-4	REAR SPOILER VERIFICATION TEST	.23-27	*DRIVER POWER SEAT REAR RISER MOTOR INOPERATIVE	.8N-87
DRIVER DOOR LOCK ACTUATOR SLOW RESPONSE	.8N-2	RECIRCULATED AIR SWITCHOVER VALVE CIRCUIT	.24-46	*DRIVER POWER SEAT RECLINER MOTOR INOPERATIVE	.8N-81
DRIVER SEAT BELT TENSIONER CIRCUIT	.80-53	REMOTE KEYLESS ENTRY RELAY CONTROL CIRCUIT	.8Q-40	*GLOVE BOX LAMP INOPERATIVE	.8L-127
DRIVER SEAT BELT TENSIONER SQUIB CIRCUIT	.80-10	RIGHT COOLANT CIRCULATION VALVE CIRCUIT	.24-40	*HIGH BEAM INDICATOR INOPERATIVE	.8J-42
ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT	.24-23			*HORNS ALWAYS ON	.8H-5
EVAPORATOR TEMPERATURE SENSOR CIRCUIT	.24-18			*HORNS INOPERATIVE	.8H-2
FUEL DOOR LOCK ACTUATOR SLOW RESPONSE	.8N-5			*LEFT BACK UP LAMP INOPERATIVE	.8L-50
				*LEFT FOG LAMP INOPERATIVE	.8L-2

Description	Group-Page
*LEFT FRONT POWER WINDOW INOPERATIVE	.8N-110
*LEFT FRONT SIDE MARKER LAMP INOPERATIVE	.8L-32
*LEFT FRONT TURN LAMP INOPERATIVE	.8L-11
*LEFT HEATED MIRROR INOPERATIVE	.8G-16
*LEFT HEATED SEAT INOPERATIVE	.8G-26
*LEFT HIGH BEAM HEADLAMP INOPERATIVE	.8L-23
*LEFT LOW BEAM HEADLAMP INOPERATIVE	.8L-20
*LEFT PARK LAMP INOPERATIVE	.8L-8
*LEFT POWER MIRROR INOPERATIVE	.8N-53
*LEFT REAR SIDE MARKER LAMP INOPERATIVE	.8L-38
*LEFT REAR TURN LAMP INOPERATIVE	.8L-53
*LEFT STOP LAMP INOPERATIVE	.8L-47
*LEFT TAIL LAMP INOPERATIVE	.8L-44
*LEFT TURN SIGNAL INDICATOR INOPERATIVE	.8J-38
*LICENSE LAMP NO.1 INOPERATIVE	.8L-71
*LICENSE LAMP NO.2 INOPERATIVE	.8L-74
*NO RESPONSE FROM A/C HEATER CONTROL MODULE	.8E-21
*NO RESPONSE FROM BODY CONTROL MODULE	.8E-36
*NO RESPONSE FROM CONTROLLER ANTILOCK BRAKE	.8E-25
*NO RESPONSE FROM INSTRUMENT CLUSTER	.8E-13
*NO RESPONSE FROM OCCUPANT RESTRAINT CONTROLLER	.8E-10
*NO RESPONSE FROM POWERTRAIN CONTROL MODULE	.8E-4
*NO RESPONSE FROM SENTRY KEY REMOTE ENTRY MODULE	.8E-40
*NO RESPONSE FROM SHIFT LEVER ASSEMBLY	.8E-29
*NO RESPONSE FROM TRANSMISSION CONTROL MODULE	.8E-33
*NO RESPONSE FROM UNIVERSAL GARAGE DOOR OPENER/TIRE PRESSURE MONITOR	.8E-17
*NO SOUND FROM ALL SPEAKERS	.8A-5
*NO SOUND FROM LEFT DOOR SPEAKERS	.8A-8
*NO SOUND FROM LEFT REAR SPEAKER	.8A-12
*NO SOUND FROM RIGHT DOOR SPEAKERS	.8A-10
*NO SOUND FROM RIGHT REAR SPEAKER	.8A-14
*PASSENGER POWER SEAT HORIZONTAL MOTOR INOPERATIVE	.8N-91
*PASSENGER POWER SEAT INOPERATIVE	.8N-76
*PASSENGER POWER SEAT RECLINER MOTOR INOPERATIVE	.8N-89
*RADIO INOPERATIVE	.8A-2
*REAR WINDOW DEFOGGER INOPERATIVE	.8G-5
*RIGHT BACK UP LAMP INOPERATIVE	.8L-62
*RIGHT FOG LAMP INOPERATIVE	.8L-5
*RIGHT FRONT POWER WINDOW INOPERATIVE	.8N-113
*RIGHT FRONT SIDE MARKER LAMP INOPERATIVE	.8L-35
*RIGHT FRONT TURN LAMP INOPERATIVE	.8L-17
*RIGHT HEATED MIRROR INOPERATIVE	.8G-18

Description	Group-Page
*RIGHT HEATED SEAT INOPERATIVE	.8G-29
*RIGHT HIGH BEAM HEADLAMP INOPERATIVE	.8L-29
*RIGHT LOW BEAM HEADLAMP INOPERATIVE	.8L-26
*RIGHT PARK LAMP INOPERATIVE	.8L-14
*RIGHT POWER MIRROR INOPERATIVE	.8N-55
*RIGHT REAR SIDE MARKER LAMP INOPERATIVE	.8L-41
*RIGHT REAR TURN LAMP INOPERATIVE	.8L-65
*RIGHT STOP LAMP INOPERATIVE	.8L-59
*RIGHT TAIL LAMP INOPERATIVE	.8L-56
*RIGHT TURN SIGNAL INDICATOR INOPERATIVE	.8J-40
*SEAT BELT INDICATOR INOPERATIVE	.8J-48
*TELESCOPING WHEEL INDICATOR INOPERATIVE	.8J-50
*WASHERS INOPERATIVE	.8R-4
*WASHERS RUN CONTINUOUSLY WITH IGNITION ON	.8R-6
*WIPERS HIGH SPEED INOPERATIVE	.8R-11
*WIPERS INOPERATIVE	.8R-8
*WIPERS INTERMITTENT SPEED INOPERATIVE	.8R-15
*WIPERS LOW SPEED INOPERATIVE	.8R-13
*WIPERS RUN CONTINUOUSLY WITH IGNITION ON	.8R-17

CHASSIS DIAGNOSITCS

ABS VERIFICATION TEST	.5-148
ABS VERIFICATION TEST	.5-185
BAS RELEASE SWITCH CIRCUIT	.5-166
BAS SOLENOID VALVE CIRCUIT	.5-181
BAS TRAVEL SENSOR CIRCUIT	.5-171
BRAKE LAMP SWITCH CIRCUIT	.5-143
BRAKE LAMP SWITCH CIRCUIT	.5-176
CAB INTERNAL FAILURE	.5-153
CAB INTERNAL FAILURE	.5-80
CAB SYSTEM OVERVOLTAGE	.5-158
CAB SYSTEM OVERVOLTAGE	.5-85
CAB SYSTEM UNDERVOLTAGE	.5-155
CAB SYSTEM UNDERVOLTAGE	.5-82
CAN BUS COMMUNICATION GENERAL MALFUNCTION	.5-162
CAN BUS COMMUNICATION GENERAL MALFUNCTION	.5-88
ESP BRAKE PRESSURE SENSOR 1 CIRCUIT	.5-128
ESP BRAKE PRESSURE SENSOR 2 CIRCUIT	.5-133
ESP LATERAL ACCELERATION SENSOR CIRCUIT	.5-138
ESP YAW RATE SENSOR CIRCUIT	.5-119
LEFT FRONT WHEEL SPEED SENSOR CIRCUIT	.5-95
LEFT REAR WHEEL SPEED SENSOR CIRCUIT	.5-107
NO CAN COMMUNICATIONS WITH PCM	.5-164
NO CAN COMMUNICATIONS WITH PCM	.5-90
NO CAN COMMUNICATIONS WITH TCM	.5-92
PCM NOT IDENTIFIED OR INCORRECT	.5-161
PCM NOT IDENTIFIED OR INCORRECT	.5-94
RIGHT FRONT WHEEL SPEED SENSOR CIRCUIT	.5-101

Description	Group-Page
RIGHT REAR WHEEL SPEED SENSOR CIRCUIT	.5-113
STEERING ANGLE SENSOR CIRCUIT	.5-124

POWERTRAIN DIAGNOSITCS

(P0040) 1/1 AND 2/1 O2 SENSOR HARNESS CONNECTORS REVERSED	.9-5
(P0101) MAF SENSOR PERFORMANCE	.9-8
(P0102) MASS AIR FLOW CIRCUIT	.9-10
(P0103) MAF SENSOR CIRCUIT LOW	.9-17
(P0104) MAF SENSOR THROTTLE ANGLE AND SPEED	.9-19
(P0106) MAP SENSOR PERFORMANCE	.9-21
(P0107) MAP SENSOR CIRCUIT LOW	.9-24
(P0108) MAP SENSOR CIRCUIT HIGH	.9-29
(P0112) INTAKE AIR TEMPERATURE SENSOR CIRCUIT LOW	.9-31
(P0113) INTAKE AIR TEMPERATURE SENSOR CIRCUIT HIGH	.9-36
(P0116) ENGINE COOLANT TEMPERATURE SENSOR PERFORMANCE	.9-40
(P0116) ENGINE COOLANT TEMPERATURE SENSOR SHORT CIRCUIT	.9-47
(P0117) ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT LOW	.9-49
(P0118) ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT HIGH	.9-51
(P0120) ELECTRONIC THROTTLE CONTROL MOTOR PERFORMANCE	.9-53
(P0120) THROTTLE POSITION SENSOR 1/2 CORRELATION	.9-59
(P0121) APPS 5-VOLT SUPPLY CIRCUIT	.9-61
(P0122) APPS SIGNAL #1 CIRCUIT LOW	.9-65
(P0123) APPS SIGNAL #1 CIRCUIT HIGH	.9-70
(P0128) FORCED LIMITED POWER EXCESSIVE HIGH COOLANT TEMP.	.9-74
(P0128) THERMOSTAT RATIONALITY	.9-78
(P0131) O2 SENSOR 1/1 CIRCUIT LOW	.9-86
(P0132) O2 SENSOR 1/1 CIRCUIT HIGH	.9-93
(P0133) O2 SENSOR 1/1 LONG DELAY TIME	.9-101
(P0133) O2 SENSOR 1/1 LONG PERFORMANCE	.9-99
(P0133) O2 SENSOR 1/1 SHORT DELAY TIME	.9-95
(P0133) O2 SENSOR 1/1 SHORT PERFORMANCE	.9-103
(P0134) O2 SENSOR 1/1 CIRCUIT OPEN	.9-105
(P0135) O2 SENSOR 1/1 HEATER CIRCUIT HIGH	.9-113
(P0135) O2 SENSOR 1/1 HEATER CIRCUIT LOW	.9-107
(P0135) O2 SENSOR 1/1 HEATER CIRCUIT OPEN	.9-117
(P0135) O2 SENSOR 1/1 HEATER PERFORMANCE	.9-109
(P0137) O2 SENSOR 2/2 ABOVE THRESHOLD	.9-123
(P0137) O2 SENSOR 1/2 ABOVE THRESHOLD	.9-121
(P0137) O2 SENSOR 1/2 BELOW THRESHOLD	.9-119
(P0137) O2 SENSOR 2/2 BELOW THRESHOLD	.9-127
(P0138) O2 SENSOR 1/2 CIRCUIT HIGH	.9-129
(P0138) O2 SENSOR 1/2 CIRCUIT OPEN	.9-131

Description	Group-Page	Description	Group-Page	Description	Group-Page
(P0138) O2 SENSOR 2/2 CIRCUIT LOW	9-133	(P0200) FUEL INJECTOR CIRCUIT	9-236	(P0455) EVAP SYSTEM LARGE LEAK	9-399
(P0138) O2 SENSOR 2/2 CIRCUIT OPEN	9-135	(P0201) FUEL INJECTOR #1 CIRCUIT	9-238	(P0457) EVAP PURGE VALVE LEAKING	9-406
(P0140) O2 SENSOR 1/2 CIRCUIT LOW	9-137	(P0202) FUEL INJECTOR #2 CIRCUIT	9-242	(P0460) FUEL LEVEL SENSOR CIRCUIT	9-408
(P0140) O2 SENSOR 2/2 CIRCUIT HIGH	9-139	(P0203) FUEL INJECTOR #3 CIRCUIT	9-244	(P0500) NO VEHICLE SPEED SIGNAL (CAB CAN MESSAGE)	9-410
(P0141) O2 SENSOR 1/2 HEATER CIRCUIT HIGH	9-145	(P0204) FUEL INJECTOR #4 CIRCUIT	9-246	(P0500) VEHICLE SPEED PERFORMANCE ESP MIL REQUEST	9-412
(P0141) O2 SENSOR 1/2 HEATER CIRCUIT LOW	9-141	(P0205) FUEL INJECTOR #5 CIRCUIT	9-248	(P0561) BATTERY SYSTEM VOLTAGE	9-414
(P0141) O2 SENSOR 1/2 HEATER CIRCUIT OPEN	9-143	(P0206) FUEL INJECTOR #6 CIRCUIT	9-250	(P0562) BATTERY SYSTEM LOW	9-417
(P0141) O2 SENSOR 1/2 HEATER PERFORMANCE	9-147	(P0211) THROTTLE ACTUATOR STUCK	9-252	(P0563) BATTERY SYSTEM HIGH	9-419
(P0151) O2 SENSOR 2/1 CIRCUIT LOW	9-149	(P0211) THROTTLE ACTUATOR STUCK	9-257	(P0571) STOP LAMP SWITCH CAN SIGNAL LOST TO TRANS PERFORMANCE	9-421
(P0152) O2 SENSOR 2/1 CIRCUIT HIGH	9-151	(P0221) APPS SENSOR #1 AND #2 VOLTAGE CORRELATION	9-262	(P0571) STOP LAMP SWITCH SIGNAL PERFORMANCE	9-423
(P0153) O2 SENSOR 2/1 LONG DELAY TIME	9-155	(P0221) ELECTRONIC THROTTLE CONTROL MODULE PERFORMANCE	9-270	(P0600) INCORRECT CAN MESSAGE FROM EIS CONTROL MODULE	9-425
(P0153) O2 SENSOR 2/1 LONG PERFORMANCE	9-153	(P0221) ELECTRONIC THROTTLE CONTROL MODULE PROCESSOR	9-272	(P0600) LOST COMM WITH ELECTRIC GEAR SHIFT MODULE (SLA)	9-439
(P0153) O2 SENSOR 2/1 SHORT DELAY TIME	9-157	(P0221) IDLE SPEED PERFORMANCE	9-266	(P0600) NO CAN MESSAGE FROM CAB MODULE	9-427
(P0153) O2 SENSOR 2/1 SHORT PERFORMANCE	9-159	(P0222) APPS SIGNAL #2 CIRCUIT LOW	9-274	(P0600) NO CLUSTER BUS MESSAGE	9-445
(P0154) O2 SENSOR 2/1 CIRCUIT OPEN	9-161	(P0223) APPS SIGNAL #2 CIRCUIT HIGH	9-279	(P0600) NO TRANSMISSION BUS MESSAGE	9-433
(P0155) O2 SENSOR 2/1 HEATER CIRCUIT HIGH	9-165	(P0300) MULTIPLE CYLINDER MISFIRE	9-283	(P0602) PCM PROGRAMMED INCORRECT TRANS/NO COMM FROM TCM	9-451
(P0155) O2 SENSOR 2/1 HEATER CIRCUIT LOW	9-163	(P0301) CYLINDER #1 MISFIRE	9-294	(P0700) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-453
(P0155) O2 SENSOR 2/1 HEATER CIRCUIT OPEN	9-167	(P0302) CYLINDER #2 MISFIRE	9-304	(P0702) LOSS OF TORQUE MANAGEMENT SIGNAL	9-459
(P0155) O2 SENSOR 2/1 HEATER PERFORMANCE	9-169	(P0303) CYLINDER #3 MISFIRE	9-308	(P0702) TCM TORQUE MANAGEMENT REQUEST PERFORMANCE	9-461
(P0161) O2 SENSOR 2/2 HEATER CIRCUIT HIGH	9-177	(P0304) CYLINDER #4 MISFIRE	9-312	(P0702) TRANSMISSION CONTROL MODULE LOW VOLTAGE	9-455
(P0161) O2 SENSOR 2/2 HEATER CIRCUIT LOW	9-173	(P0305) CYLINDER #5 MISFIRE	9-316	(P0702) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-457
(P0161) O2 SENSOR 2/2 HEATER CIRCUIT OPEN	9-175	(P0306) CYLINDER #6 MISFIRE	9-320	(P0705) SLA CONTROL SYSTEM (MIL REQUEST)	9-463
(P0161) O2 SENSOR 2/2 HEATER PERFORMANCE	9-171	(P0325) KNOCK SENSOR #1 CIRCUIT HIGH	9-328	(P0705) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-465
(P0171) FUEL SYSTEM 1/1 RICH CONTROL OVER LIMIT (AT IDLE)	9-183	(P0325) KNOCK SENSOR #1 CIRCUIT LOW	9-324	(P0715) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-467
(P0171) FUEL SYSTEM 1/1 RICH CONTROL OVER LIMIT (AT LOAD)	9-187	(P0330) KNOCK SENSOR #2 CIRCUIT HIGH	9-330	(P0720) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-475
(P0171) FUEL SYSTEM 1/1 UNDERCORRECTION OF FUEL MIXTURE (OFF IDLE)	9-179	(P0330) KNOCK SENSOR #2 CIRCUIT LOW	9-332	(P0720) TRANSMISSION INCORRECT TORQUE REQUEST FROM ESP	9-469
(P0172) FUEL SYSTEM 1/1 LEAN CONTROL BELOW LIMIT (AT IDLE)	9-207	(P0335) CRANKSHAFT POSITION SENSOR CIRCUIT	9-334	(P0730) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-477
(P0172) FUEL SYSTEM 1/1 LEAN CONTROL BELOW LIMIT (AT LOAD)	9-199	(P0341) CAMSHAFT POSITION SENSOR PERFORMANCE	9-346	(P0740) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-479
(P0172) FUEL SYSTEM 1/1 OVERCORRECTION OF FUEL MIXTURE (AT IDLE)	9-195	(P0341) CAMSHAFT POSITION SENSOR OVER-ADVANCED	9-344	(P0743) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-481
(P0173) FUEL SYSTEM 2/1 RICH CONTROL OVER LIMIT (AT LOAD)	9-211	(P0341) CAMSHAFT POSITION SENSOR OVER-RETARDED	9-340	(P0748) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-483
(P0174) FUEL SYSTEM 2/1 LEAN CONTROL BELOW LIMIT (AT LOAD)	9-224	(P0400) EGR SYSTEM PERFORMANCE	9-350	(P0753) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-485
(P0174) FUEL SYSTEM 2/1 RICH CONTROL OVER LIMIT (AT IDLE)	9-218	(P0403) EGR CONTROL CIRCUIT	9-354	(P0758) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-487
(P0174) FUEL SYSTEM 2/1 RICH CONTROL OVER LIMIT (AT LOAD)	9-221	(P0410) SECONDARY AIR INJECTION RELAY CIRCUIT	9-362	(P0763) TRANSMISSION CONTROL SYSTEM (MIL REQUEST)	9-489
(P0174) FUEL SYSTEM 2/1 UNDERCORRECTION OF FUEL MIXTURE (OFF IDLE)	9-227	(P0410) SECONDARY AIR INJECTION SYSTEM	9-356	(P1386) KNOCK SENSOR SYSTEM FAILURE	9-491
(P0175) FUEL SYSTEM 2/1 LEAN CONTROL BELOW LIMIT (AT IDLE)	9-233	(P0412) SECONDARY AIR INJECTION SWITCHOVER SOLENOID CIRCUIT	9-365	(P1600) ROUGH ROAD DETECTED	9-493
(P0175) FUEL SYSTEM 2/1 OVERCORRECTION OF FUEL MIXTURE (OFF IDLE)	9-230	(P0422) CATALYTIC 1/1 EFFICIENCY	9-369	(P2513) ENHANCED ACCIDENT REPORT DRIVER CIRCUIT HIGH	9-499
		(P0432) CATALYTIC 2/1 EFFICIENCY	9-372	(P2513) ENHANCED ACCIDENT REPORT DRIVER CIRCUIT LOW	9-504
		(P0440) GENERAL EVAP SYSTEM FAILURE	9-374	(P2545) ESP TORQUE MANAGEMENT REQUEST PERFORMANCE	9-506
		(P0441) EVAP PURGE VALVE	9-376		
		(P0442) EVAP SYSTEM SMALL LEAK	9-378		
		(P0445) EVAP PURGE SOLENOID CIRCUIT	9-380		
		(P0446) CHARCOAL CANISTER SHUTOFF VALVE	9-384		
		(P0446) EVAP PURGE SOLENOID STUCK OPEN	9-387		
		(P0451) FUEL TANK PRESSURE SENSOR PERFORMANCE	9-390		
		(P0452) FUEL TANK PRESSURE SENSOR CIRCUIT LOW	9-395		
		(P0453) FUEL TANK PRESSURE SENSOR CIRCUIT HIGH	9-397		

Description	Group-Page	Description	Group-Page	Description	Group-Page
(P2561) HVAC CONTROL MODULE REQUESTED MIL ILLUMINATION	9-512	TRANSMISSION DIAGNOSITCS		(P0715) INPUT SENSOR OVERSPEED	21-94
COOLING FAN CONTROL CIRCUIT HIGH	9-517	(P0219) ENGINE OVERSPEED	21-3	(P0715) N2 INPUT SPEED SENSOR CIRCUIT	21-97
COOLING FAN CONTROL CIRCUIT LOW	9-519	(P0562) SYSTEM UNDERVOLTAGE	21-6	(P0715) N3 INPUT SPEED SENSOR CIRCUIT	21-103
COOLING FAN CONTROL CIRCUIT OPEN	9-514	(P0600) ABS BRAKE MESSAGE	21-12	(P0720) CAN BUS CIRCUIT	21-109
ENGINE OIL SENSOR LEVEL PERFORMANCE	9-521	(P0600) ABS CAN MESSAGE INCORRECT	21-15	(P0730) IMPROPER GEAR	21-113
ENGINE OIL SENSOR OVER TEMPERATURE	9-526	(P0600) ABS CAN MESSAGE MISSING	21-18	(P0730) IMPROPER RATIO	21-116
ENGINE OIL SENSOR PERFORMANCE	9-531	(P0600) ABS LEFT FRONT SENSOR MESSAGE	21-22	(P0740) TCC OVERTEMP	21-119
ENGINE OIL SENSOR QUALITY PERFORMANCE	9-533	(P0600) ABS LEFT REAR SENSOR MESSAGE	21-25	(P0740) TCC STUCK ON	21-121
ENGINE OIL SENSOR WATER CONTAMINATION	9-538	(P0600) ABS RIGHT FRONT SENSOR MESSAGE	21-28	(P0743) TCC SOLENOID CIRCUIT	21-124
POWERTRAIN VERIFICATION TEST – VER 1	9-569	(P0600) ABS RIGHT REAR SENSOR MESSAGE	21-31	(P0748) MODULATING PRESSURE SOLENOID CIRCUIT	21-128
POWERTRAIN VERIFICATION TEST – VER 2	9-570	(P0600) ACCEL PEDAL SENSOR CAN MESSAGE INCORRECT	21-34	(P0753) 1-2/4-5 SOLENOID CIRCUIT	21-132
POWERTRAIN VERIFICATION TEST – VER 3	7-9	(P0600) CAN MESSAGE FROM ECM FROM SLA	21-38	(P0753) 1–2/4–5 SOLENOID CIRCUIT SHORT TO GROUND	21-136
POWERTRAIN VERIFICATION TEST – VER 3	9-571	(P0600) ENGINE CAN MESSAGE INCORRECT	21-41	(P0758) 2-3 SOLENOID CIRCUIT	21-138
POWERTRAIN VERIFICATION TEST – VER 4	9-572	(P0600) ENGINE CAN MESSAGE MISSING	21-44	(P0758) 2–3 SOLENOID CIRCUIT SHORT TO GROUND	21-142
POWERTRAIN VERIFICATION TEST – VER 5	9-573	(P0600) ENGINE RPM MESSAGE	21-48	(P0763) 3-4 SOLENOID CIRCUIT	21-144
SAFETY FUEL SHUT OFF DETECTED	9-540	(P0600) ENGINE TEMPERATURE MESSAGE	21-51	(P0763) 3–4 SOLENOID CIRCUIT SHORT TO GROUND	21-148
SHORT RUNNER SOLENOID CIRCUIT HIGH	9-545	(P0600) ENGINE TORQUE MESSAGE INCORRECT	21-54	(P0778) SHIFT PRESSURE SOLENOID CIRCUIT	21-150
SHORT RUNNER SOLENOID CIRCUIT LOW	9-549	(P0600) IC CAN MESSAGE INCORRECT	21-57	(P0778) SOLENOID SUPPLY VOLTAGE	21-154
SHORT RUNNER SOLENOID CIRCUIT	9-551	(P0600) IC/HVAC CAN MESSAGE MISSING	21-60	(P0850) TRANS TEMP SENSOR - P/N SWITCH CIRCUIT	21-158
SPEED CONTROL SWITCH INPUT CIRCUIT	9-553	(P0600) SLA CAN MESSAGE INCORRECT	21-64	(P1793) ENGINE TORQUE REDUCTION	21-163
*CHECKING FUEL DELIVERY	9-556	(P0700) SENSOR SUPPLY VOLTAGE	21-67	(P0563) SYSTEM OVERVOLTAGE	21-9
*CHECKING HARD START (FUEL SYSTEM)	9-560	(P0700) TRANSMISSION SLIPPING	21-71	CAN BUS CIRCUIT	21-167
*ENGINE CRANKS BUT DOES NOT START	9-563	(P0702) CONTROL MODULE TCM IS NOT CODED	21-74	INCORRECT CAN MESSAGE FROM ABS	21-169
*INTERMITTENT NO CRANK	9-567	(P0702) INTERNAL CONTROLLER	21-76	INTERNAL CONTROLLER	21-171
*RADIATOR COOLING FAN ALWAYS ON	7-6	(P0702) INVALID CONTROL MODULE VERSION	21-78	LR WHEEL SPIN CAN MESSAGE NOT VALID	21-173
*RADIATOR COOLING FAN INOPERATIVE	7-2	(P0702) SOLENOID SUPPLY/WATCHDOG	21-80	OVERVOLTAGE	21-177
		(P0710) TRANS TEMP SENSOR SHORTED	21-83	RR WHEEL SPIN CAN MESSAGE NOT VALID	21-175
		(P0714) TRANS TEMP SENSOR ERRATIC	21-87	TRANSMISSION VERIFICATION TEST	21-181
		(P0715) INPUT SENSOR MISMATCH	21-90	UNDERVOLTAGE	21-179